

Sleeve Installation and Removal Instructions - Tool Release

INSTALLATION



Step 1

Ensure the BFM™ Spigot is clean and dry.



Step 2

Seat the back of the connector into the BFM™ Spigot and hold, keeping fingers clear of the seal.

CAUTION!

It is important to keep fingers clear of the seal as it snaps into place with force.



Step 3

COMPLETE.

The BFM™ Fitting is ready for use.

REMOVAL



Step 1

Insert the removal tool in the opening of the hole and push towards the centre of the fitting.



Step 2

Hold the seal of the connector and remove from the spigot.

Note: Never fit a tool release sleeve into a standard spigot. Installation and removal should be carried out by trained personnel. Suitable labelling is recommended adjacent to installation. For guidance on installations with regard to potential static ignition risk refer to the relevant codes of practice, i.e. Electrostatics code of practice for the avoidance of hazards due to static electricity PD CLC/TR 50404. BFM™ recommend the use of an earthing strap.

BFM Global makes no warranty of any kind, expressed or implied, except that goods sold shall be of merchantable quality, free of manufacturing defect, and the buyer assumes all risk and liability resulting from the use of the goods, whether used singly or in combination with other products.

ProSpare

Bestwood Road • Pinxton • Nottinghamshire NG16 6NT
Tel • +44 (0)1773 814008 • Fax • +44 (0)1773 860055 • Email • sales@prospare.co.uk

prospare.co.uk